

# Using the Arrestor Cables™

## *Arrestor Cable™ Usage*

Arrestor Cables™ are high strength connectors that can be used to increase the coverage area of the Archer 1200 vehicle barrier. Cables come in 4-ft and 10-ft lengths with eyebolt attachments.




## *Arrestor Cable™ Attachment*

Cables are easily attached by hand-tightening the eyebolt through any one of six points on the vertical and horizontal edge of the Archer 1200 barrier



**IMPORTANT:** Cables are designed for quick and easy removal. Only apply hand-tight torque to the bolts


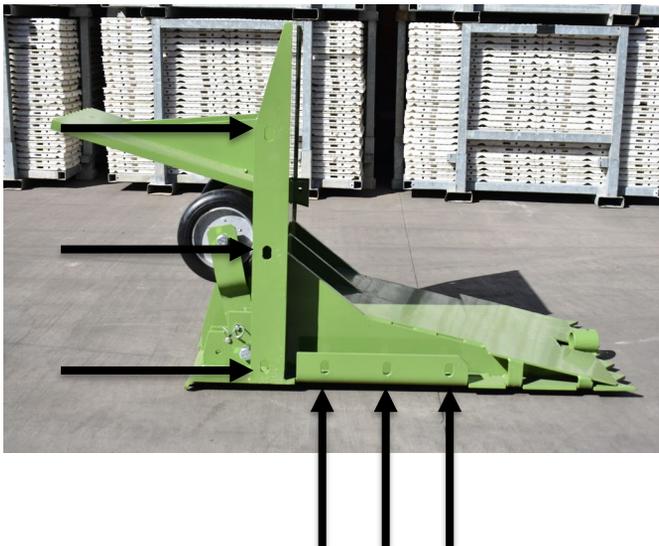


Video of Arrestor Cable™ usage at:  
<https://www.youtube.com/watch?v=ZiTqqYMCcrg>

## Cable Deployments

Cables may be attached at the midpoint of the vertical edge to connect barriers and prevent pedestrian flow. Barriers should be placed to allow for a 1-ft sag of the cable. Utilize the 10-ft cable in areas where you may need quick access of emergency vehicles.

Cables may be attached to the horizontal edge to connect barriers and allow free pedestrian flow. Barriers should be spaced to the full length of the cable. Cables should be covered with ADA-compliant ramps.

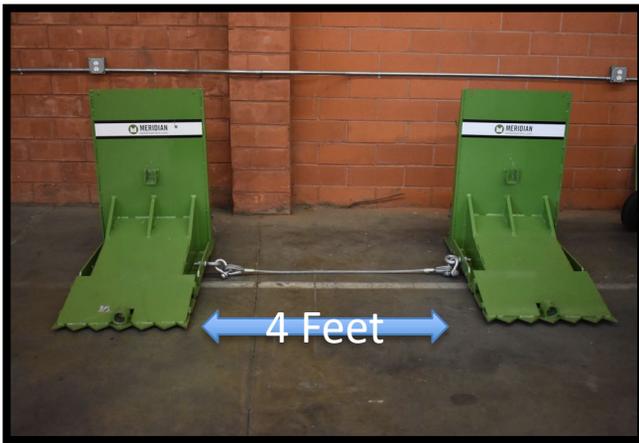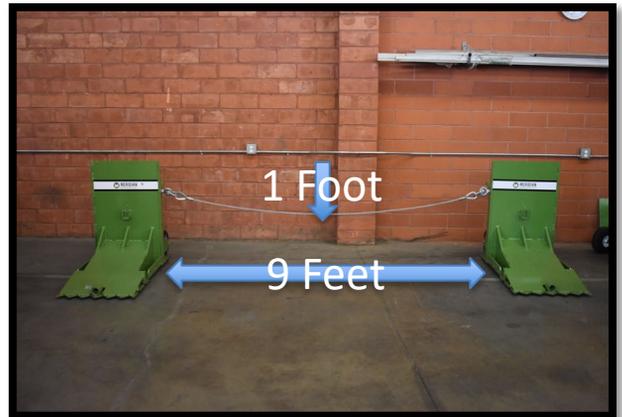

Video of Arrestor Cable™ usage at:  
<https://www.youtube.com/watch?v=ZiTqqYMCcrg>



USE CAUTION when lifting and moving barriers. An NIOSH model for safe lifting can be found at:  
<https://www.cdc.gov/niosh/docs/94-110/pdfs/94-110.pdf>

## Questions?

Meridian is committed to support your needs. Should you have any questions about deployment, placement or parts, please contact us at [info@betterbarriers.com](mailto:info@betterbarriers.com) and we will respond within 24 hours.